




## Operation Instructions

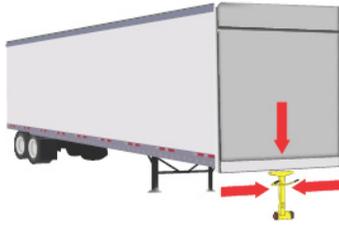


1. Position Auto-Riser under nose of trailer centered from both sides, ensuring the stand is positioned approximately in the middle and a few centimeters back from the nose.

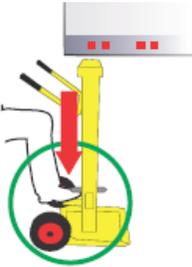

2. Step on the foot plate and press down firmly. You will release pressure on the locking pin. This will allow you to release the locking pin mechanism.

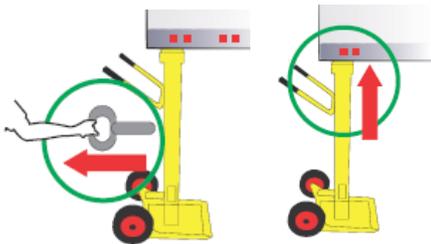


3. To release the locking pin mechanism; pull back on the hand held pin while pressing down slightly on the foot plate. This will allow the Auto-Riser to rise to the underside of the trailer.

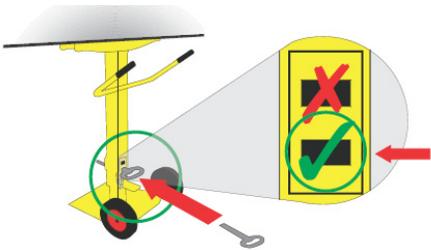


4. Once the Auto-Riser has reached the underside of the trailer, find the appropriate slot and insert the locking pin, locking the unit into place.

**Note:** You may need to step on the foot plate to find the closest hole for locking pin.

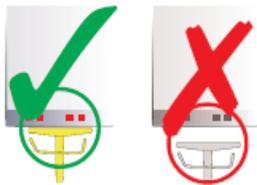

5. Ensure the Auto-Riser is as close to the underside of the trailer as possible (if not making contact). In some cases there will be a small gap between the top of the stand and the underside of the trailer.

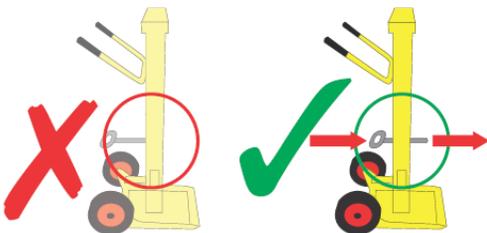

6. Ensure the Auto-Riser is in the correct locked position to avoid potential injury to personnel or damage to equipment. The locking pin should be fully inserted through the centre mast of the stand. If the pin is not fully inserted, repeat steps 3-5.


### Notes:

**Only trained people are to use the Auto-Riser.**

**Only original parts are to be used for replacement.**

**The Auto-Riser is to be used on solid surfaces (ie. concrete or asphalt).**

**Caution:** If the Auto-Riser is subjected to a situation where trailer landing gear collapse has occurred, it should be replaced to ensure maximum safety.

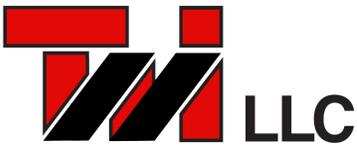

# ***Auto-Riser***

## **Warranty**

TMI, LLC warrants for a period of three hundred and sixty-five (365) days from date of installation, or three hundred and seventy-five (375) days from date of shipment, whichever shall occur first, that all products and service parts shall be free from defects in workmanship and material. If the equipment or any part thereof, is returned, transportation charges pre-paid, within the periods specified above, and if examination by TMI, LLC discloses to its satisfaction that the said equipment or part thereof has been defective in workmanship or material, it will deliver to the purchaser, without charge, parts of the first class workmanship and material in exchange for any parts so found to be defective, and TMI, LLC is limited to said exchange. This warranty shall not apply: (1) to maintenance service or adjustment; and (2) to any equipment which shall have been repaired or altered outside of TMI, LLC or its authorized service representatives. These warranties are in lieu of all other warranties, expressed or implied, including, without limitation, warranties of merchantability and fitness for particular purpose, all other representations to the first user purchaser, and all other obligations or liabilities, including liability or incidental and consequential damages, on the part of TMI, LLC. No person is authorized to give any other warranties or to assume any other liability on behalf of TMI, LLC unless made or assumed in writing by TMI, LLC.